


We print value for your life !



SOLID  **810**

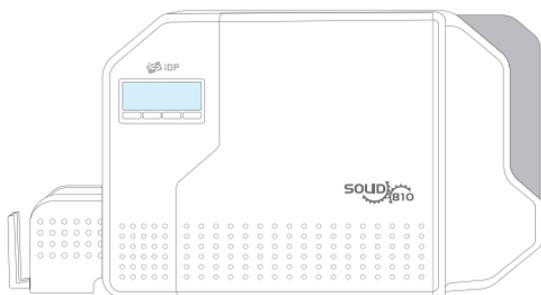

QUICK INSTALLATION GUIDE



Features

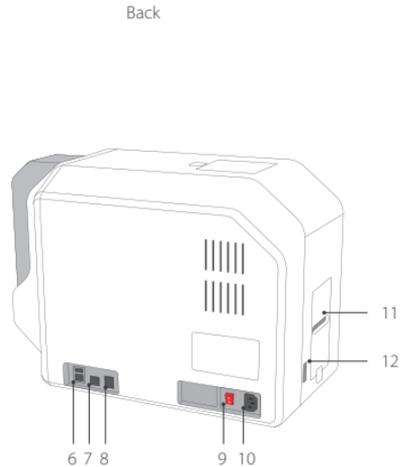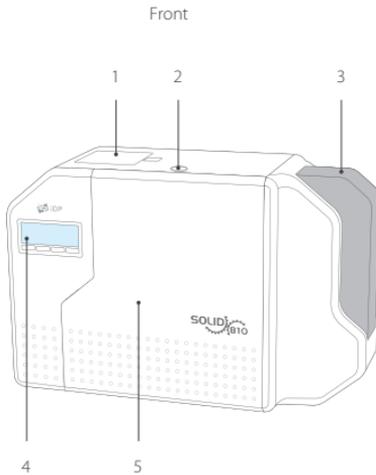

1. Air Vent
2. Physical Lock ^{*option}
3. Input Hopper
4. LCD & Buttons
5. Front Cover

6. Ethernet & External USB Port
7. USB Port
8. RS232 Port
9. Power Switch
10. AC Power Connector
11. Card Exit Slot
12. IR Comm. Port

Included



SOLID-810
Card Printer



AC Power
Cable



USB Cable



Card Stacker



Ribbon
Cartridge
(in the Printer)



Retransfer Film
Cartridge
(in the Printer)




Cable
Protection Cover




Quick Guide

Display & Buttons

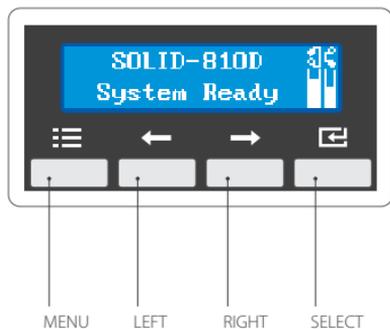


There is an LCD and 4 buttons on the front side of the SOLID-810. Users can check the printer status and change various printer settings.

The LCD icons below display the remaining amount of retransfer film or ribbon and status.

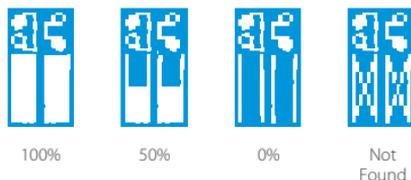


※ Please refer to the “User manual” for how to set the LCD menu.


I. Printer Installation

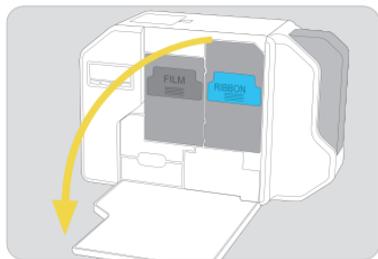


1. Open the front side of the printer cover.

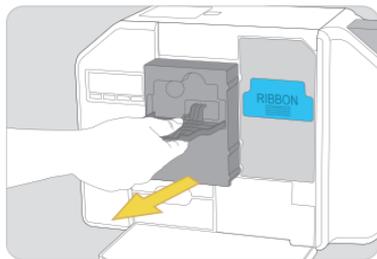


2. Hold the Retransfer film cartridge handle and pull it out.

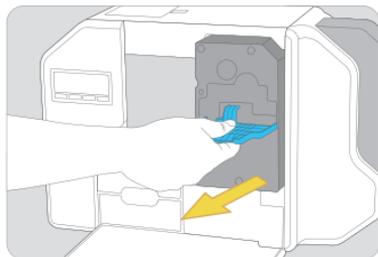

3. Hold the Ribbon cartridge handle and pull it out.


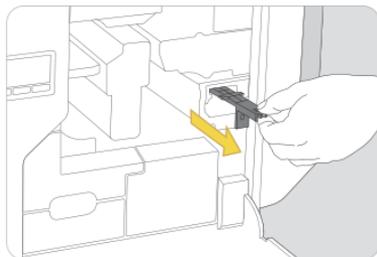


4. Hold the disposable cleaning roller cartridge handle and take it out.

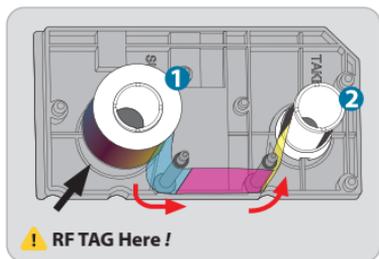



5. Insert the ① ribbon SUPPLY core on the mounting place of the cartridge core until it "clicks". Wind the ribbon around two shafts following the diagram arrow, and insert ② TAKE UP core into the core mounting until it "clicks".

6. Adjust the tension of the loaded ribbon in the direction of the arrow using the A TENSION KNOB on the front side of the ribbon cartridge.

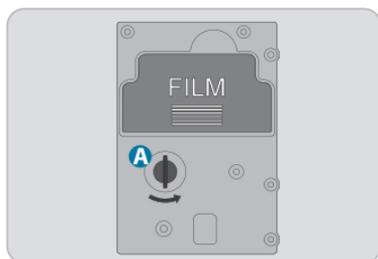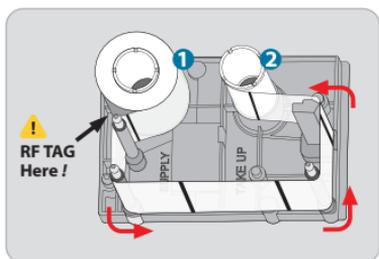

7. Insert the ① retransfer film SUPPLY core on the mounting place of the cartridge core until it "clicks". Wind the film around four shafts following the diagram arrow, and insert ② TAKE UP core into the core mounting until it "clicks".

8. Adjust the tension of loaded retransfer film in the direction of the arrow using the A TENSION KNOB on the front side of the film cartridge.

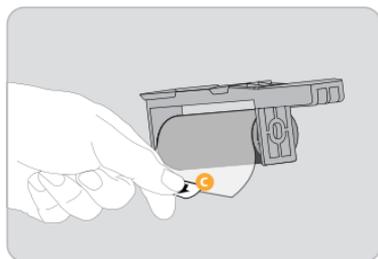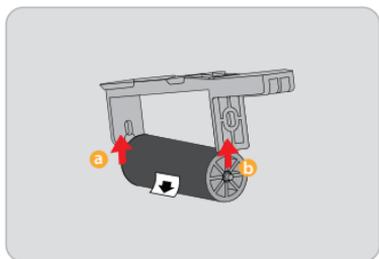


9. Mount the Disposable cleaning roller in order a, b.


10. Remove the c protective film from the cleaning roller.



The RF tag side of the supply core should be mounted in the direction of the cartridge surface.

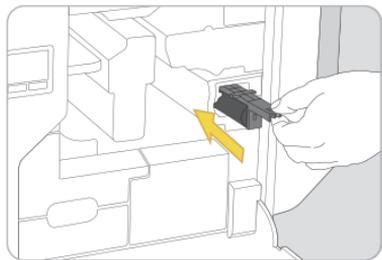


11. Mount the Disposable cleaning roller inside the printer.

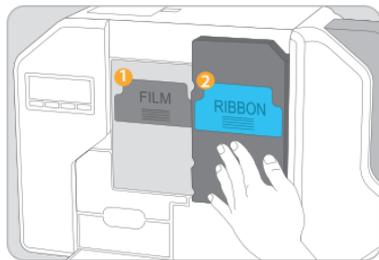


12. Mount ① Retransfer film cartridge at first and then, mount ② Ribbon cartridge.


※ The cartridge should be tightly combined with the printer.

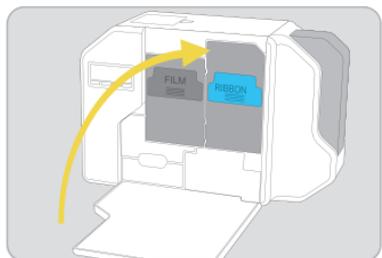


13. Close the front side of printer cover.

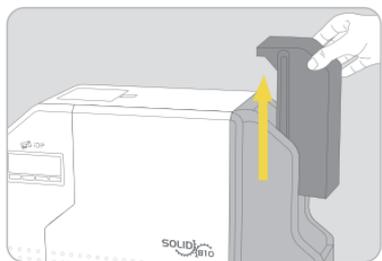


14. Open the Input Hopper cover in the direction of the arrow.

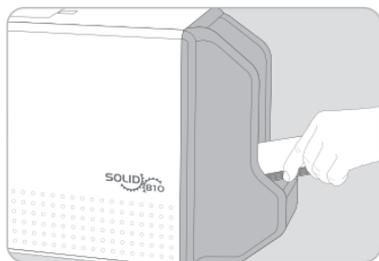


15. Insert the blank card, and then close the Input Hopper cover.

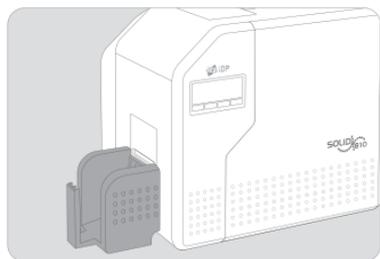

16. Install the Card Stacker.

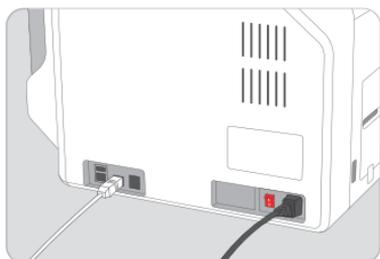

17. Connect the AC Power cable and USB cable.

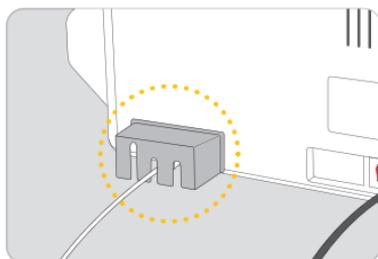

18. Install the Cable Protection Cover.



Do not connect the USB cable to the computer and do not turn on the printer at this time as it may interfere with the successful installation of the driver.

It will be prompted during the following instructions on when to turn on the printer.


Scan the QR code to download the Printer Driver.




II. Printer Driver Installation



1. Scan QR Code or Go to idp-solid.com/download and download the "SOLID-810 Printer Driver". Extract the driver and all its components (Extract All) from the ZIP file and save it on your PC. Do not install the driver from the ZIP program.

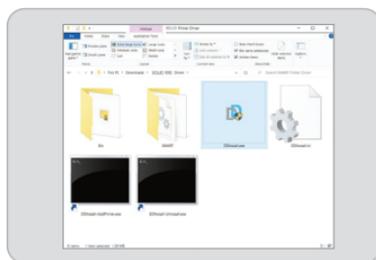


2. Navigate to the extracted files and double click on the "DDinstall.exe" file to begin the installation.

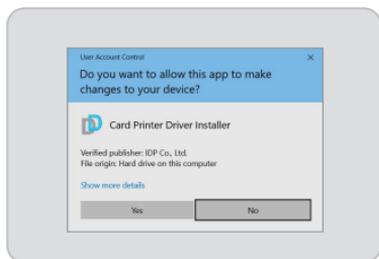


3. When the "User Account Control" pop-up window opens, click "Yes".

※ Depending on your computer's settings, you may be prompted to supply local admin credentials to authorize the installation of the driver.

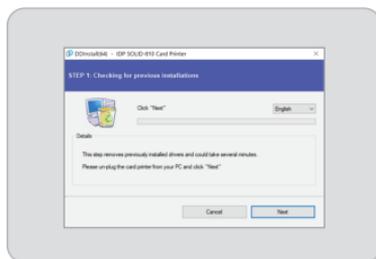


4. To change the language from the default English to other language click "Next".

This step may take several minutes.

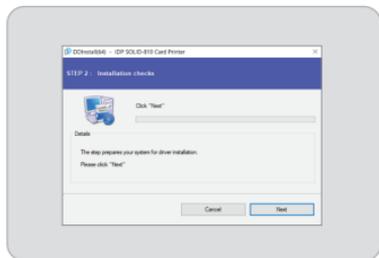


5. Click "Next" to install the printer driver package in STEP 2.

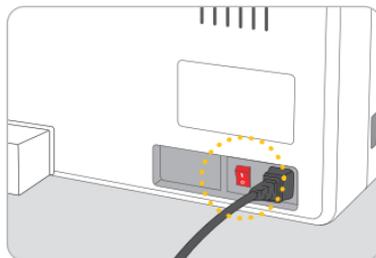


6. Connect the USB cable to PC and turn on the printer by pressing the On/Off button at the indicated point.



Connect the USB Cable to the computer before Power on the printer.

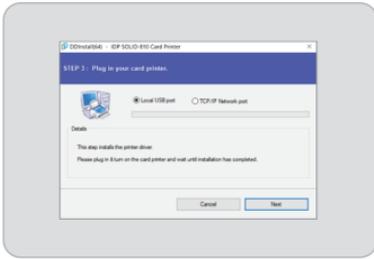


7. In case of USB connection, click “Next” and move to Step 9.
If you are planning on setting up the SOLID-810 as a network device, please proceed to Step 8.

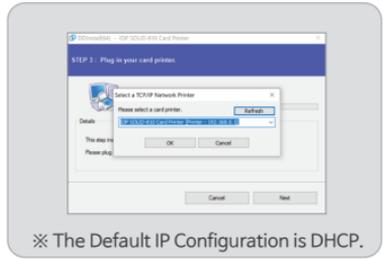

※ The Default IP Configuration is DHCP.

8. Search SOLID-810 Card Printer connected on the network. Click “OK” after selecting and click “Next”.
If the printer is not found, Please configure network setting by referring to “User Manual”.

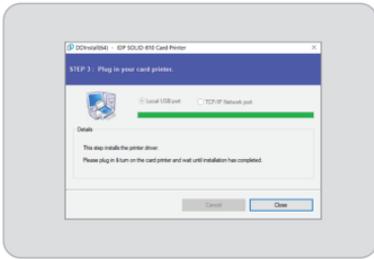


9. Click “Close” after installation has completed.



10. Open “Printers and scanners” from “Bluetooth & devices” (or “Devices”) on the Windows “Settings”. Click “SOLID-810 Card Printer” and select “Manage”.
Click “Printer properties”

※ For Windows 7 / 8, access Windows Control Panel and select Device and Printers.
Right click “SOLID-810 Card Printer” and select “Print Properties”.

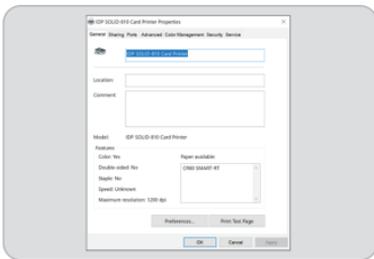

11. Select the “General” tab and click “Print Test Page” to print Test Card.





12. Check the test card to see if it has been printed properly. If so, click “Close”.

프린터 개요

전면

후면

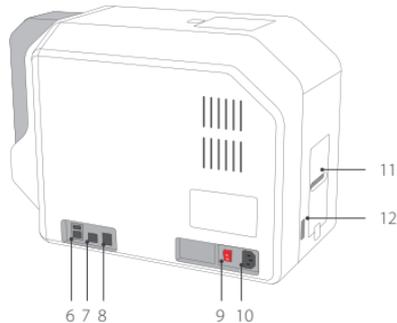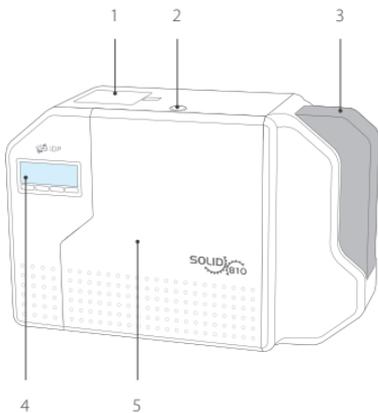

1. 공기 배출구
2. Key 잠금장치 *옵션
3. 인프트 호퍼
4. LCD & 버튼
5. 전면 커버

6. Ethernet & 외부장치용 USB 포트
7. USB 포트
8. RS232 포트
9. 전원 스위치
10. AC 전원 포트
11. 카드 배출구
12. 적외선 통신 포트

Included



SOLID-810
카드 프린터



AC 파워
케이블



USB 케이블



카드 스택커



리본 카트리지
(프린터 본체 내장)



재전사 필름
카트리지
(프린터 본체 내장)




케이블
보호 커버



퀵 가이드


디스플레이 & 버튼

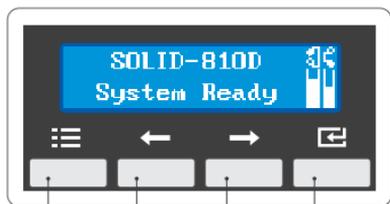

메뉴 왼쪽 오른쪽 선택


SOLID-810 전면에는 LCD와 4개의 버튼으로 프린터의 상태확인 및 프린터의 각종 설정을 변경할 수 있습니다.

LCD 우측 아이콘은 재전사 필름과 프린트 리본의 잔량과 상태가 표시됩니다. (왼쪽: 재전사 필름 | 오른쪽: 리본)

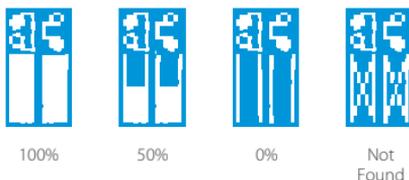


※ LCD 메뉴 구성 및 설정에 대한 자세한 사항은 “사용자 메뉴얼”을 참고하시기 바랍니다.


I. 프린터 설치

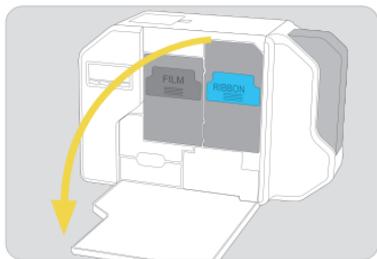


1. 프린터 전면 커버를 열어 주십시오.

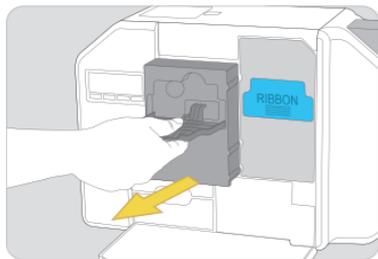


2. 재전사 필름 카트리지의 손잡이를 잡고 당겨서 꺼내십시오.

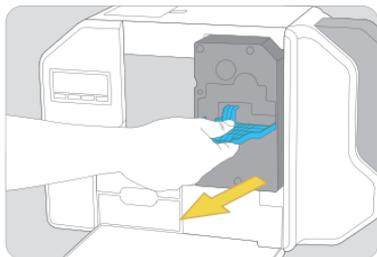


3. 리본 카트리지의 손잡이를 잡고 당겨서 꺼내십시오.

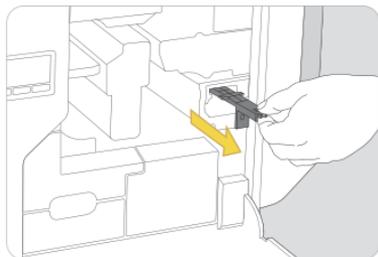


4. 1회용 클리닝 롤러 카트리지 손잡이를 잡고 꺼내십시오.

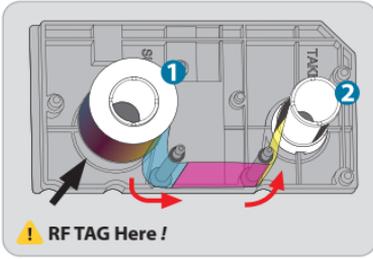


5. 리본이 감겨진 ① SUPPLY 코어를 카트리지의 코어 장착 홈에 “딸깍” 소리가 날 때까지 끼웁니다. 그림과 같이 화살표 방향에 따라 리본을 2개의 샤프트에 걸고 필름이 감겨져있지 않은 ② TAKE UP 코어를 코어 장착 홈에 “딸깍” 소리가 날 때까지 끼웁니다.

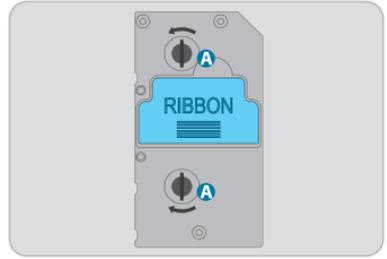


6. 리본 카트리지 전면 A 텐션노브를 화살표 방향으로 돌려 장착된 리본의 텐션을 조절합니다.

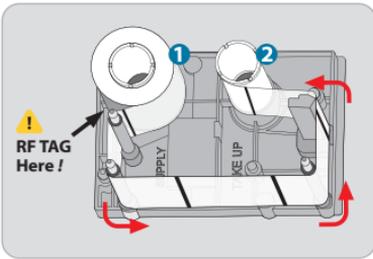


7. 재전사 필름이 감겨진 ① SUPPLY 코어를 카트리지의 코어 장착 홈에 “딸깍” 소리가 날 때까지 끼웁니다. 그림과 같이 화살표 방향에 따라 필름을 4개의 샤프트에 걸고 필름이 감겨져있지 않은 ② TAKE UP 코어를 코어 장착 홈에 “딸깍” 소리가 날 때까지 끼웁니다.

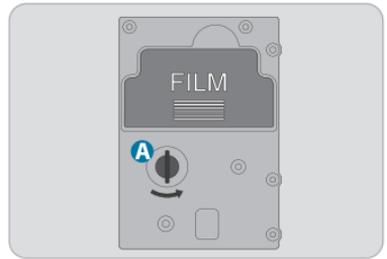

8. 필름 카트리지 전면 A 텐션노브를 화살표 방향으로 돌려 장착된 필름의 텐션을 조절합니다.

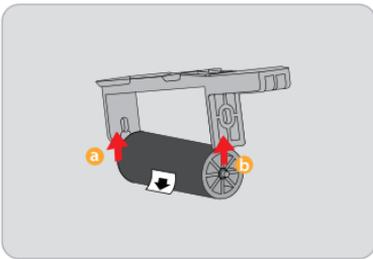


9. 1회용 클리닝 롤러를 a, b 순서에 따라 장착합니다.

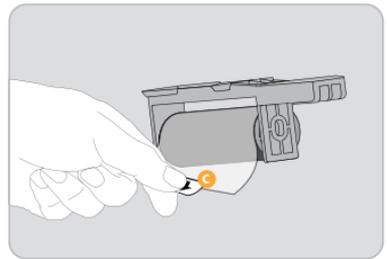


10. 1회용 클리닝 롤러의 c 보호필름을 제거합니다.



RF tag의 방향은 반드시 각 카트리지의 supply 코어 위치의 안쪽 방향으로 장착되어야 합니다.

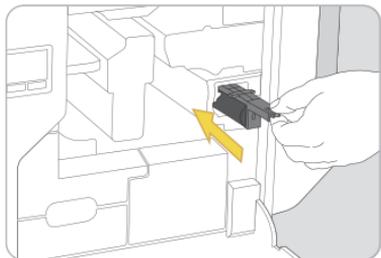


11. 1회용 클리닝 롤러를 프린터에 장착해 주십시오.

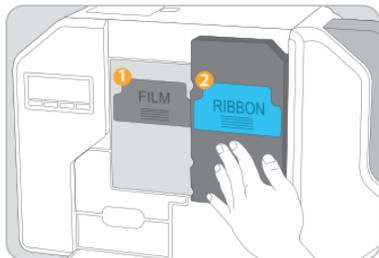


12. ① 재전사 필름 카트리지를 먼저 장착한 후,
② 리본 카트리지를 장착해 주십시오.


※ 카트리는 프린터에 단단히 결합되어야 합니다.

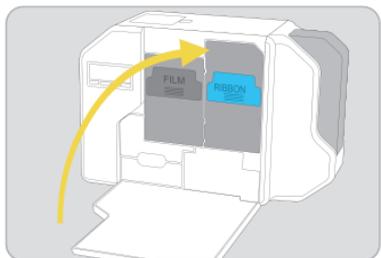


13. 프린터 전면 커버를 닫아 주십시오.

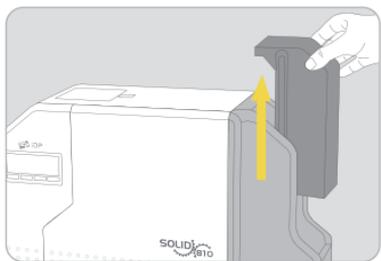


14. 인풋 호퍼 커버를 화살표 방향으로 분리해 주십시오.

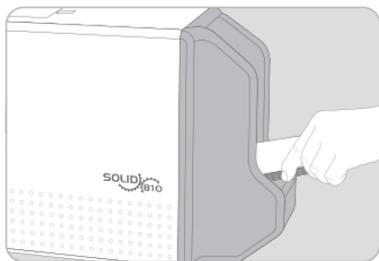


15. 카드를 넣어주고 인풋 호퍼 커버를 닫아주십시오.

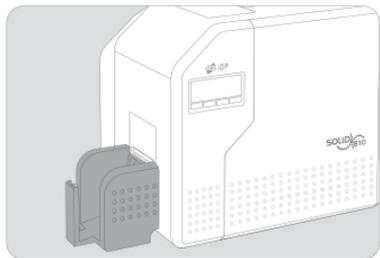

16. 카드 스테커를 결합해 주십시오.

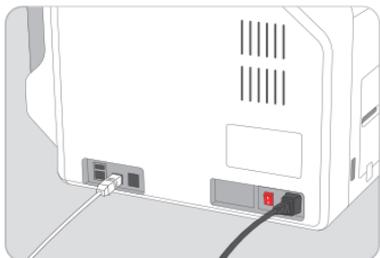

17. AC 파워 케이블과 USB 케이블을 연결해 주십시오.

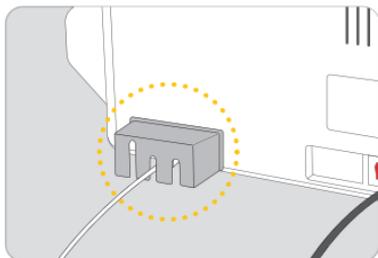

18. 케이블 보호 커버를 장착해 주십시오.




드라이버 패키지의 정상적인 설치를 위해 프린터 드라이버 설치 단계 중 해당 안내가 있을 때까지 USB 케이블을 PC와 연결하지 마시고 프린터 전원을 켜지 마십시오.


QR 코드를 스캔하여 프린터 드라이버를 다운로드하세요.



II. 프린터 드라이버 설치

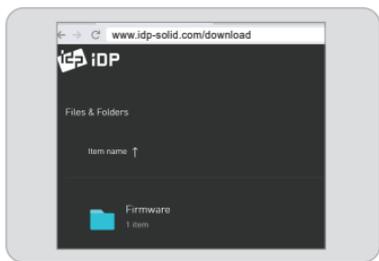

1. QR 코드를 스캔하거나 idp-solid.com/download 로 접속합니다. 제품 자료실에서 “SOLID-810 Printer Driver” 를 다운받습니다.

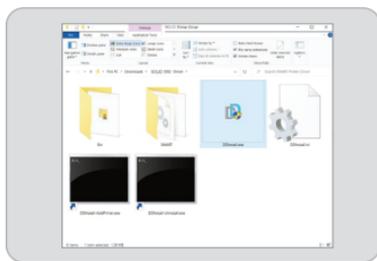


2. 다운로드 받은 파일의 압축을 풀고 “SOLID-810 Printer Driver” 폴더 내에 “DDInstall.exe” 을 실행합니다.




3. '사용자 계정 컨트롤' 윈도우가 나올 경우, “예”를 클릭하여 프로그램을 실행합니다.


※ 컴퓨터 설정에 따라 드라이버 설치를 승인하기 위해 로컬 관리자 자격 증명을 제공하라는 메시지가 표시 될 수 있습니다.

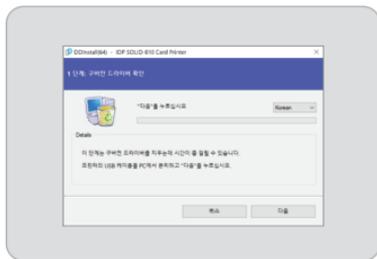

4. 1 단계에서 언어를 Korean으로 선택하고 “다음”을 클릭합니다. 이 단계에서는 시간이 오래 걸릴 수도 있습니다.

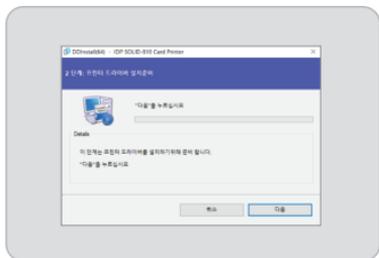


5. 2 단계에서 프린터 드라이버 패키지를 설치할 수 있도록 “다음”버튼을 클릭합니다.

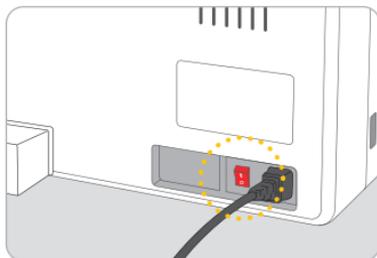


6. PC와 USB 케이블을 연결하고 표시된 부분의 전원 스위치를 눌러 프린터의 전원을 켭니다.



프린터 전원을 켜기 전에 USB 케이블을 연결하십시오.

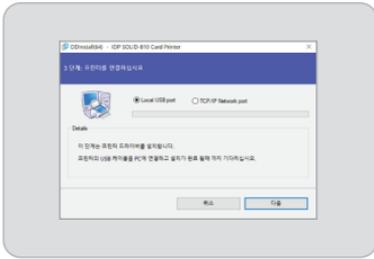


7. 3 단계에서 USB로 연결된 경우에는 “다음” 버튼을 클릭하고 Step 9번으로 가시고, Network 로 연결한 경우에는 Step 8번으로 갑니다.

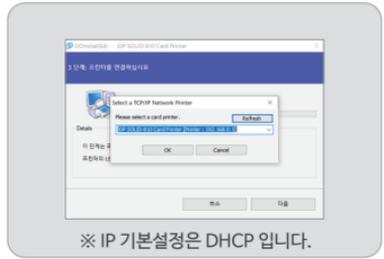

※ IP 기본설정정은 DHCP 입니다.

8. 네트워크에 연결된 SOLID-810 프린터를 검색하여 선택한 후 “OK” 버튼을 클릭하고, “다음” 버튼을 클릭합니다. 프린터가 검색되지 않는 경우 “SOLID-810 사용자 매뉴얼”을 참고하여 네트워크 설정을 먼저 하십시오.

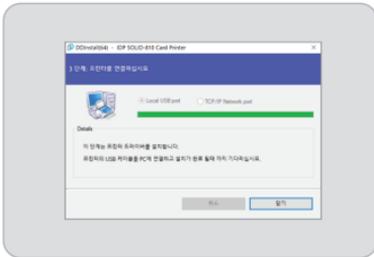

9. 3단계가 완료되면 “닫기” 버튼을 클릭하십시오.



10. 윈도우 설정에서 “장치 - 프린터 및 스캐너”를 열고 “IDP SOLID-810 Card Printer”를 선택하고 “관리”를 클릭, “프린터 속성”을 선택합니다. 프린터가 보이지 않으면, “F5”키를 누릅니다.

※ 윈도우 7/8 사용자의 경우 제어판의 “장치 및 프린터”를 열고 “IDP SOLID-810 Card Printer”를 선택, 마우스 오른쪽 클릭 후 “프린터 속성”을 선택 합니다.



11. “IDP SOLID-810 Card Printer 속성”에서 “테스트 페이지 인쇄”를 클릭합니다.



12. 테스트 카드가 그림과 같이 정상적으로 인쇄 되었는지 확인합니다.

We print value for your life !



IDP Corp., Ltd.

#601, 50, Digital-ro 33-gil,
Guro-gu, Seoul, Korea,
08377

T +82-2-6099-3700

F +82-2-6099-3717

E sales@idp-corp.com

IDP Americas, Inc.

1485 S County Trail, Unit 306
East Greenwich, RI 02818
USA

T +1-401-400-7111

F +1-401-667-7445

E sales@idpamericas.com

IDP Middle East

13F, Jafza View 18, Downtown
Jebel Ali P.O.Box 17588,
Dubai U.A.E.

T +971-4-889-5900

E mea@idp-corp.com